

LUNES 2.0 3P



195 cm



4 mm







6 cm



SHOWER DOOR, 3 SLIDING PANELS (ACCESS FROM BOTH SIDES)

Dimensions		Code	Glass				Profile			
Actual size	Access		1	2	11	78	A	B	K	J
A	*		Clear	Aqua	Niva	Lunes 2.0 print	White	Silver	Chrome	Matt Silver
78↔84	37	LUN3P78-								
84↔90	41	LUN3P84-								
90↔96	45	LUN3P90-								
96↔102	49	LUN3P96-								
102↔108	53	LUN3P102-								
108↔114	57	LUN3P108-								
114↔120	61	LUN3P114-								
120↔126	65	LUN3P120-								
126↔132	69	LUN3P126-								
132↔138	73	LUN3P132-								
138↔144	77	LUN3P138-								
H 160↔200	SPECIAL	LUN3PSP								

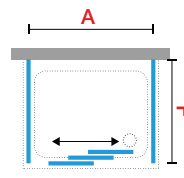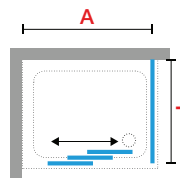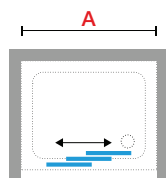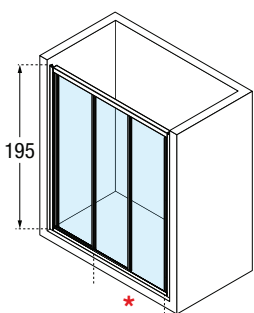



GLASS TYPE



Clear
code 1



Aqua
code 2



Niva
code 11



Lunes 2.0 Print
code 78

PROFILE COLOURS



White
code A



Silver
code B



Chrome
code K




Matt silver
code J

TECHNICAL DATA

PROFILE COLOURS




White
code A

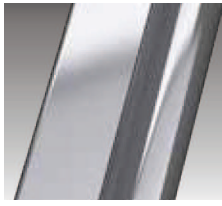

Silver
code B



Chrome
code K

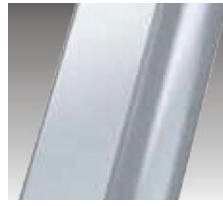


Matt silver
code J


GLASS TYPES 3,4,5,6 mm (European Standards UNI EN 14428)



Clear
code 1

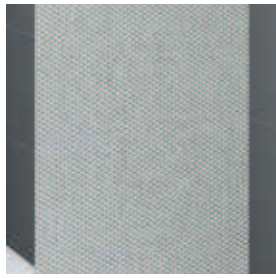

Niva
code 11

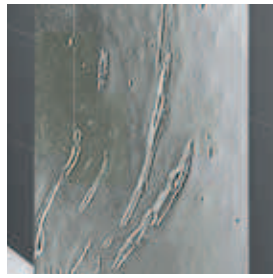

Aqua
code 2

PRINTING




Lunes 2.0
code 78

HANDLE




Chromed or white
metal handle


OVERALL DIMENSIONS FIXING PROFILES

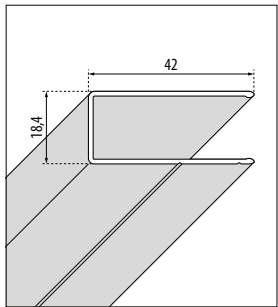


WALL
R - 2A - 2P - 2PH
A - AH - 3PH

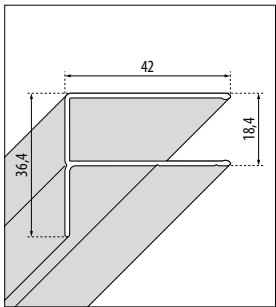


WALL
G+FL - 3P - S - B - G

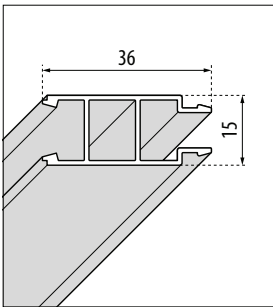

EXTENSION
R - 2A - G+FL + 3P + 3PH - G
- B - S - 2P - 2PH - A - AH

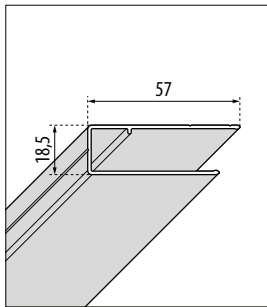

EXTENSION
R - 2A - 2P - 2PH
A - AH - 3PH

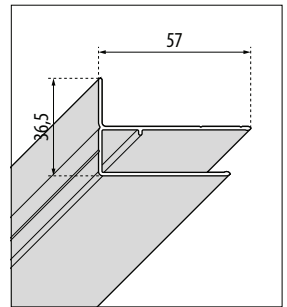

EXTENSION
G+FL - 3P - S - B - G

Profile	Code
White	P01BJMOST-A
Silver	P01BJMOST-B
Chrome	P01BJMOST-K
Matt Silver	P01BJMOST-J



Profile	Code
White	P01BJGBST-A
Silver	P01BJGBST-B
Chrome	P01BJGBST-K
Matt Silver	P01BJGBST-J

Profile	Code
White	P05HAAST3-A
Silver	P05HAAST3-B
Chrome	P05HAAST3-K
Matt Silver	P05HAAST3-J



Profile	Code
White	P05BHST-A
Silver	P05BHST-B
Chrome	P05BHST-K
Matt Silver	P05BHST-J

Profile	Code
White	P05BHCST-A
Silver	P05BHCST-B
Chrome	P05BHCST-K
Matt Silver	P05BHCST-J

HOW TO TAKE THE MEASUREMENTS

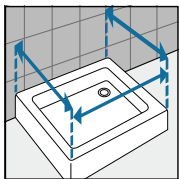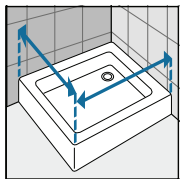

Take the measurements from wall to the external edge of the shower tray. Dimensions must be taken once the walls are finished and tiled, according to the above drawings.

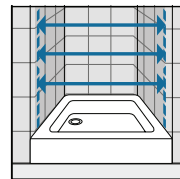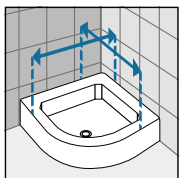

Take the measurements from wall to wall at the bottom, at the top, in the middle and use the smallest. Dimensions must be taken once the walls are finished and tiled, according to the above drawings.