

# LUNES 2.0 S BIFOLD







## FOLDING SHOWER DOOR

FOR RECESS INSTALLATION OR COMBINED WITH 1 OR 2 LATERAL SIDE PANELS LUNES 2.0 F OR FZ



Dimensions					Code	Glass				Profile type / Price			
Size	Actual dimensions	Access	Projection			1	2	11	78	A	B	K	J
	<b>A</b>	*	<b>B</b>	<b>B1</b>		Clear	Aqua	Niva	Lunes 2.0 print.	White	Silver	Chrome	Matt Silver
<b>STANDARD</b>													
70	66 ↔ 72	48	29	27	<b>LUNS66-</b>	●							
76	72 ↔ 78	54	32	30	<b>LUNS72-</b>	●							
80	74 ↔ 80	56	33	31	<b>LUNS74-</b>	●							
80	78 ↔ 84	60	35	33	<b>LUNS78-</b>	●							
90	84 ↔ 90	66	38	36	<b>LUNS84-</b>	●							
100	96 ↔ 102	78	44	42	<b>LUNS96-</b>	●							
<b>OTHER SIZES</b>													
◇	60 ↔ 66	42	26	24	<b>LUNS60-</b>								
◇	90 ↔ 96	72	41	39	<b>LUNS90-</b>	●							
<b>H 160 ↓ 200</b>					<b>SPECIAL LUNSSP</b>								◇

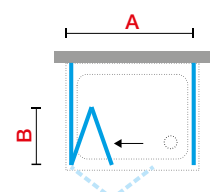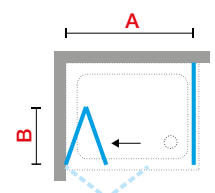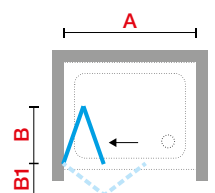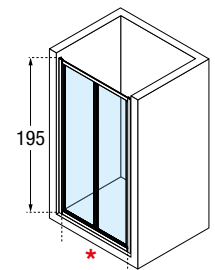

### Safety opening

ATTENTION: the bifold door is designed to be opened inward. The safety opening feature is for emergency access.

● IN STOCK UK

(Other products) please check availability


Construction of the Code: **Code** + **Glass** + **Profile** = Final product Code

# TECHNICAL DATA

## GLASS TYPES (European standards UNI EN 14428)



**Clear**  
COD. 1

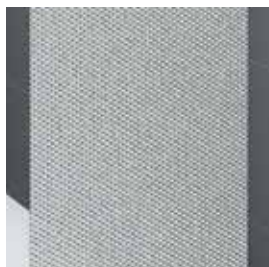


**Niva**  
COD. 11



**Aqua**  
COD. 2

## PRINTING

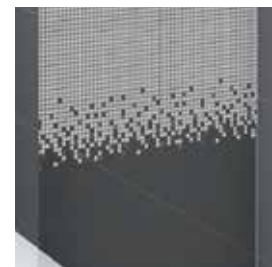

**Lunes 2.0**  
COD. 78

## PROFILE COLOURS



**White**  
COD. A



**Silver**  
COD. B



**Chrome**  
COD. K




**Matt Silver**  
COD. J

## HANDLES




**Chrome or white handle**

## OVERALL DIMENSIONS FIXING PROFILES

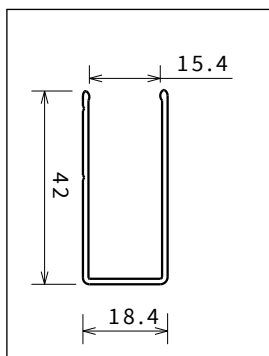


**Standard profile**  
**R-2A-2P-2PH-A-AH**

Profile type	Code
White	<b>P01BJMOST-A</b>
Silver	<b>P01BJMOST-B</b>
Chrome	<b>P01BJMOST-K</b>
Matt Silver	<b>P01BJMOST-J</b>

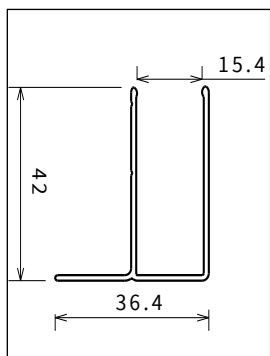


**Standard profile**  
**G+FL-3PH-3P-S-B-G**

Profile type	Code
White	<b>P0BJGST-A</b>
Silver	<b>P0BJGST-B</b>
Chrome	<b>P0BJGST-K</b>
Matt Silver	<b>P0BJGST-J</b>

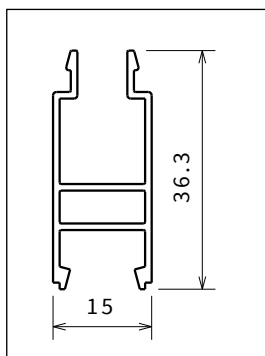


**Extension Profile**  
**R-2A-G+FL-3P-3PH-G-B-S-2P-2PH-A-AH**

Profile type	Code
White	<b>P05HAAST3-A</b>
Silver	<b>P05HAAST3-B</b>
Chrome	<b>P05HAAST3-K</b>
Matt Silver	<b>P05HAAST3-J</b>

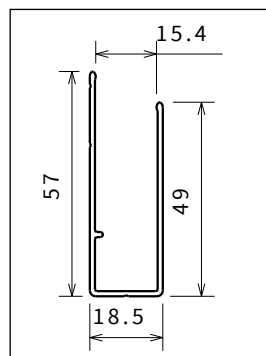

**Extension Profile**  
**R-2A-2P-2PH-A-AH**



Profile type	Code
White	<b>P05BHST-A</b>
Silver	<b>P05BHST-B</b>
Chrome	<b>P05BHST-K</b>
Matt Silver	<b>P05BHST-J</b>

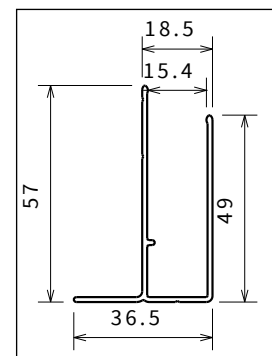


**Extension Profile**  
**G+FL-3PH-3P-S-B-G**

Profile type	Code
White	<b>P05BHCST-A</b>
Silver	<b>P05BHCST-B</b>
Chrome	<b>P05BHCST-K</b>
Matt Silver	<b>P05BHCST-J</b>

## HOW TO TAKE THE MEASUREMENTS

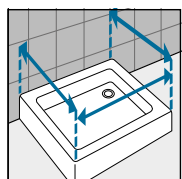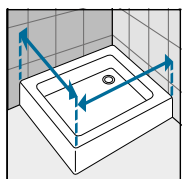

Take the measurements from wall to the external edge of the shower tray. Dimensions must be taken once the walls are finished and tiled, according to the above drawings.

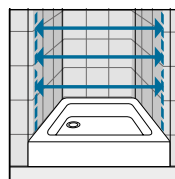

Take the measurements from wall to wall at the bottom, at the top, in the middle and use the smallest. Dimensions must be taken once the walls are finished and tiled, according to the above drawings.

